

# ROYAL® MANUAL FLUSHOMETER ROYAL 197-1.0-3-3/4-LDIM-L3

## **CODE NUMBER**

3913372

### DESCRIPTION

1.0 gpf, Rough Brass Finish, Single Flush, 3.75 L Dimension, 3" Metal Oscillating Push Button, Standard (not included, order separately) Wall Box, Royal® Concealed Manual Urinal Flushometer.

## DETAILS

- Flush Volume: 1.0 gpf (3.8 Lpf)
- Finish: Rough Brass (RB)
- Valve: Diaphragm
- Valve Body Material: Semi-red Brass
- Fixture Type: Urinal
- Fixture Connection: Top spud
- Rough-In Dimension: 13 <sup>1</sup>/<sub>2</sub>" (343mm)
- Spud Coupling: 3/4" (19mm)
- Supply Pipe: <sup>3</sup>/<sub>4</sub>" (19mm)
- L Dimension: 3 <sup>3</sup>/<sub>4</sub>" (95mm) (3-3/4-LDIM)
- Wall Box: Standard (not included, order separately)
- Push Button: 3" Metal Oscillating (L3)

## FEATURES

- Flush volumes start as low as a pint of water
- Water conservation is aided by the ADA-compliant, non-hold-open handle, which, prevents urinal from exceeding intended flush volume
- Flush accuracy is controlled by CID<sup>™</sup> technology, also enhancing water efficiency
- Durability is facilitated with high copper, low zinc brass castings for dezincification resistance
- Adjustable tailpiece
- PERMEX synthetic rubber diaphragm with Dual Filtered Fixed Bypass
- Valve body, Cover, Tailpiece and Control Stop shall be in compliance with ASTM Alloy Classification for Semi-Red Brass
- Valve shall be in compliance to the applicable sections of ASSE 1037.



Variation Not Shown: 3" Metal Oscillating Push Button

#### **COMPLIANCES & CERTIFICATIONS**



(cUPC Certified, BAA Compliant)

### **RECOMMENDED SPECIFICATION**

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi- Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

#### VALVE OPERATING PRESSURE (FLOWING)

15-80 PSI (103-552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

#### DOWNLOADS

- Sloan Concealed Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Additional Downloads

# NOTES


All information contained within this document subject to change without notice.

Looking for other variations of the ROYAL 197 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer. Find a compatible water closet for this flushometer.



# **ROUGH-IN**

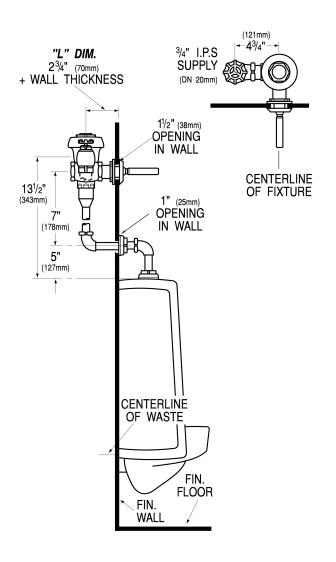

Sloan 10500 Seymour Ave, Franklin Park, IL 60131 Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com